



Operating Instructions

Controllers for Vibratory Drive Systems

SCU1000

Table of Contents

1.	About this document	4
1.1.	Document description:.....	4
2.	Safety information	4
2.1.	Design of safety directives	4
2.2.	Fundamental safety directives.....	4
2.3.	Personnel	4
2.4.	Intended use	5
2.5.	Residual hazards	5
2.5.1.	Device	5
2.5.2.	Protection of the drive system	5
2.5.3.	Degree of protection - Protection of persons and equipment	6
3.	Product information	6
3.1.	Functional description	6
3.2.	Difference between SCU1000 and SCU2000	6
3.3.	Technical data	7
3.4.	Products, spare parts and accessories	8
4.	Notes on start-up.....	8
4.1.	Modes of operation.....	8
4.2.	Automatic mode change.....	9
4.3.	Start/Stop by external controller	9
4.4.	Changing the supply voltage	11
4.5.	Measuring the output voltage or output current	12
5.	Connections on the controller.....	12
5.1.	SCU1000.....	12
6.	SCU1000 connection diagram	13
7.	Operation of SCU1000	13
7.1.	SCU1000 menu structure.....	15
7.2.	Description of SCU1000 parameters.....	16
8.	Dimensional drawing of SCU1000	17



Declaration of Conformity

According to the Low-Voltage Directive 2014/35/EU
and Electromagnetic Compatibility Directive 2014/30/EU

We hereby declare that the product meets the following requirements:

Low-Voltage Directive 2014/35/EC
Electromagnetic Compatibility Directive 2014/30/EU

Applied harmonised standards: DIN EN 60204 T1
 EN 61439-1

Remarks:

Rhein-Nadel-Automation

Managing Director
Dr. Tobias Hensen



1. About this document



Attention

Read this document carefully and observe the safety directives before commencing any work.

The information given in this document reflects the following version:

Product	from software version	Date
SCU1000	V1.0	2019-03-01

1.1. Document description:

This document provides assistance in choosing your product. You will also find information on mechanical and electrical installation, product extensions and accessories.+

2. Safety information

2.1. Design of safety directives



Notice

This notice identifies useful tips for use of the controller.



Attention!

This symbol identifies hazardous situations.

Non-observance of such warnings may cause irreversible injury or even death!

2.2. Fundamental safety directives

Non-observance of the following fundamental safety measures and directives may lead to severe injury and damage to property!

Meeting the requirements given in the related documentation is a precondition for safe and trouble-free operation and for achieving the product properties specified. Further additional safety directives in the other sections must be observed as well.

2.3. Personnel



Attention!

Any work on electrical equipment of the machine/system shall be carried out exclusively by a professional electrician, or by instructed persons working under the direction and supervision of a professional electrician, according to electrotechnical rules.

Only qualified professionals are allowed to work on or with the product. IEC 60364 or CENELEC HD 384 define the qualification of these persons:

- They are familiar with set-up, installation, commissioning and operation of the product.
- They possess the qualification required for performance of their work.
- They know all regulations for the prevention of accidents, directives and laws applicable to set-up, installation and commissioning on site, and they are able to apply the same.
- They have knowledge and skills of First Aid.

2.4. Intended use

Please observe the following directives for intended use of the controllers:

- The devices herein described must only be stored, fitted and operated under the conditions specified in this documentation.
- Here you are not concerned with domestic devices! They are solely intended to be used as components for commercial or professional applications pursuant to EN 61000-3-2.
- They satisfy the protection requirements of 2014/35/EU: Low Voltage Directive.
- They do not constitute a machine as defined by 2006/42/EU: Machinery Directive.
- A machine comprising the product must not be commissioned or put into operation for the intended use until it has been declared to be in conformity with the EC Directive 2006/42/EU: Machinery Directive; Observe EN 60204-1.
- Commissioning or starting operation for the intended use is only permitted in compliance with the EMC Directive 2014/30/EU.
- Use of the product in living areas may lead to EMC disturbance. The user is responsible for taking interference suppression measures.
- They are optimised for operation of RNA vibratory feeders and linear feeders. Observe the limits indicated in the technical specification.

Attention!



- Prior to start-up make sure that the protective earth conductor is connected and in proper condition. Make the PE conductor test with approved test devices only.
- Never start up despite detected damage.
- Do not make any technical modifications to the device, except as described in this document.
- Never start up in an incompletely installed state.
- Never operate the device without the required guards in place.
- Connect, disconnect or change any electrical connections only in the absence of voltage.

2.5. Residual hazards

Residual hazards may remain even if all directives have been observed and protective measures taken. Such residual hazards must be considered by the user in the risk assessment of his machine/equipment. Non-observance may lead to severe injury and damage to property!

2.5.1. Device

Pay attention to the warning signs fitted to the device!

Symbol	Description
	Hazardous voltage: Prior to commencing any work on the product check for absence of voltage on all power connections.
	Leakage current: Make fixed installation and PE connection according to EN 60204-1!

2.5.2. Protection of the drive system

Certain device parameter settings may cause overheating of the connected drive magnet, e.g., due to prolonged operation with improper boost factor.

2.5.3. Degree of protection - Protection of persons and equipment

- All specifications relate to installed condition ready for operation.
- All slots not used must be closed by protection caps or dummy plugs in order not to reduce the protection against accidental contact.

3. Product information

3.1. Functional description

The compact controller can operate all RNA vibrating motors up to a load current of 6 amps. It is designed for individual installation right local to the vibrating drive.

The controller is customized for RNA vibratory drive systems. The feed rate can be precisely adjusted within the setting range via LED display. Thanks to this new control technology the feed rate is kept largely constant even with fluctuating supply voltage.

The illuminated rocker switch on the controller front panel disconnects all poles from power supply. For frequent switching applications or when operating with a higher-level control system provision is made for enabling via a 16V-30V DC signal.

The integrated ramp function ensures time-controlled increase or decrease of the feed rate to setpoint after starting or stopping. These times are preset at 1 second and 0.2 seconds and can be changed on the controller if necessary.

The controller can operate on both 230V and 115V supply which can be selected on an internal switch. All other controller settings are made via the LED display.

3.2. Difference between SCU1000 and SCU2000

The SCU1000 has a permanently connected power cable with shockproof plug. The vibrating drive is connected to the SCU1000 by plug. If an enabling signal is required the corresponding wiring can be fed into the device through an M8x1 cable gland and connected to the internal terminals. Status signals are not brought out of the controller.

The SCU2000, however, has all connections pluggable. This means: power supply, vibrating motor, enabling signal and status signals can all be plug-connected.

3.3. Technical data

Power supply (can be changed internally):	230V AC, 50/60Hz, +10 -10% or 115V AC, 50/60Hz, +10 -10%
Output voltage:	U _{eff} 40...208 V variable, (230V supply) U _{eff} 20...105 V variable, (115V supply)
Load current:	max. 6 A(I _{eff})
Device fusing (power input):	2x miniature fuse 5 x 20mm M6.3A/250V AC
Operating modes: (depending on 50/60 Hz supply frequency)	<u>Mode 1:</u> asymmetric half-wave mode (vibrating frequency = mains frequency) 3000/3600 1/min <u>Mode 2:</u> symmetric full-wave mode (vibrating frequency = double mains frequency) 6000/7200 1/min
Mode change:	Coding jumper in load connector
Enabling of functions:	internal/external adjustable via parameters
Enabling input, external contact:	floating contact Voltage source load capability: 24V DC, <10 mA
Enabling input, external 24V signal:	Level 16...30 VDC (polarized) Signal current at 24V DC: < 10 mA
Status outputs	-
Power loss:	max. 18W
Soft start / stop	Standard start 1s, stop 0.2s adjustable via parameters
Degree of protection:	IP 54
Leakage current	Less than 2mA
Radio interference suppression:	acc. to EMC directive
Dimensions:	130 x 203 x 135 (width x height x depth)
Ambient temperature:	0°C to 40°C
Bearing temperature	-20°C to 70°C
Air humidity:	15% to 85% not condensing
Air pressure:	86 kPa to 106 kPa
Cooling:	free convection
Weight:	approx. 1.6 kg
Housing material:	Aluminium/plastics
Installation position:	Vertical
Mounting	vibration-free

Attention!

Any intervention on the controller shall void the manufacturer's warranty.

This does not apply to



- proper change of supply voltage
- proper connection of external enabling signal

in compliance with this operating instructions manual

3.4. Products, spare parts and accessories

Designation	Design	RNA article code
SCU1000	not pluggable without enabling and status signals	31002800

Designation	Con- nector	Design	RNA article code
Vibrating drive con- nector	X1	Male connector, 4 poles + PE Metal housing	31002323 (100Hz drive)
Vibrating drive con- nector	X1	Male connector, 4 poles + PE Metal housing	31002322 (50Hz drive)
M8x1 cable gland with lock nut Connection of exter- nal enabling signal for SCU1000		For outside cable diameter: 3,5 mm ... 5 mm Plastic	31002803

Designation	Description	RNA article code
Measuring adapter ESZ-02 (400V/10A)	Accessory for measurement of output voltage and output current. The adapter is supplied with connectors.	31002525

4. Notes on start-up



Attention!

Set the controller to minimum output before switching-on for commissioning or start-up after repairs or replacement of controllers/vibratory drives. Then check for proper operation while the output is increased.

4.1. Modes of operation

RNA vibratory drive systems employ mechanical spring vibrators which are set to a vibrating frequency near the mains frequency or near double mains frequency depending on weight and/or size. This is why two modes of operation are possible:

Mode 1: Asymmetric half-wave mode:
The vibrating drive operates at mains frequency.

Mode 2: Symmetric full-wave mode:
The vibrating drive operates at double mains frequency.

To assist the operator the cable glands on the drive connector are colour-coded.

Mode 1: Black
Mode 2: grey

In terms of the vibrating frequency this means:


	Mains frequency 50 Hz	Mains frequency 60 Hz	Cable gland colour
Mode 1 Half-wave mode	Vibrating frequency 50 Hz \triangleq 3000 min ⁻¹	Vibrating frequency 60 Hz \triangleq 3600 min ⁻¹	Black
Mode 2 Full-wave mode	Vibrating frequency 100 Hz \triangleq 6000 min ⁻¹	Vibrating frequency 120 Hz \triangleq 7200 min ⁻¹	grey

4.2. Automatic mode change

Vibratory drive systems by RNA do not require the operator to take care of selecting the right operating mode. The operating mode is determined by a code in the RNA vibrating drive connector. A wire jumper from pin 3 to 4 in the connector switches the controller to mode 2: 100 or 120 Hz. In the absence of this wire jumper the controller operates in mode 1: 50 or 60 Hz.

The RNA vibratory drive systems come with the right code in the connector.

Mode changes are made only and exclusively via the coding in the vibrating drive connector!

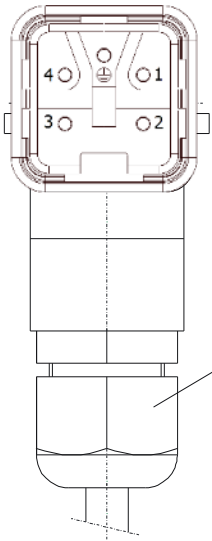

M20 gland

Black: 50/60Hz vibrating frequency

Grey: 100/120Hz vibrating frequency

(EMC metal gland if frequency controllers are used.)

(Where frequency controllers with selectable output frequency are used, an EMC metal gland and a shielded cable are provided.)

4.3. Start/Stop by external controller

With the default setting the vibrating drive is started/stopped by the power switch of the controller. The external enabling input makes it possible to control the vibrating drive by a higher-level control system. Feed the connecting cable through a cable gland into the controller and connect it to the terminal block provided for this purpose (see below).



Notice

Non-observance of these directives may lead to malfunctions or defects of the controller.

There are two options provided for external enabling:

Voltage signal:

This type of enabling should be preferred.

If a direct voltage between 16 and 30 V is available with the correct polarity the vibrating drive starts. The input is protected against polarity reversal.

Observe the following directives:

- Cable length max. 10m.
- Avoid cable routing in the immediate vicinity of high-energy switching devices or strong interference fields.

Floating contact:

If no 24 V signal is available, enabling is also possible via a floating contact. Closing of the contact enables the controller and starts the vibrating drive.

Observe the following directives:

- Cable length max. 5m.
- Use shielded cable for lengths of 3m and more.
- Avoid cable routing in the immediate vicinity of high-energy switching devices or strong interference fields.

See also connection diagram of SCU1000, chapter 5.

For both external enabling options the signal cable must be connected to terminal block X2 inside the controller.

Remove the blanking plug from one of the two top holes and install the M8x1 cable gland (supplied with the SCU1000) with lock nut. Insert a cable with a cross-section of 2x0.25mm² min. to 2x0.5mm² max. The max. cable diameter is 5mm. Use terminals 5 (+24V) and 6 (GND) to connect the external enabling voltage. Use terminals 7 and 8 to connect the floating contact. See also illustration on page 11 (position of terminals inside device).

Make sure that the required protection rating (IP54) is maintained. Take care to ensure that the cable gland corresponds to at least protection class IP54 when installed. It is also mandatory to observe the required torques and cable diameters according to manufacturer specifications.

For safety reasons the cable gland used must be plastic.

It is not permitted to enlarge the existing hole or otherwise modify the housing.

Connection of external enabling signal to SCU1000:



Attention!


Any work on electrical equipment shall be carried out exclusively by a professional electrician, or by instructed persons working under the direction and supervision of a professional electrician, according to electrotechnical rules.

Observe the safety directives in chapter 2.

SCU1000:

5 = +24VDC, enabling via external voltage
6 = GND, enabling via external voltage

7 = enabling via external contact
8 = enabling via external contact

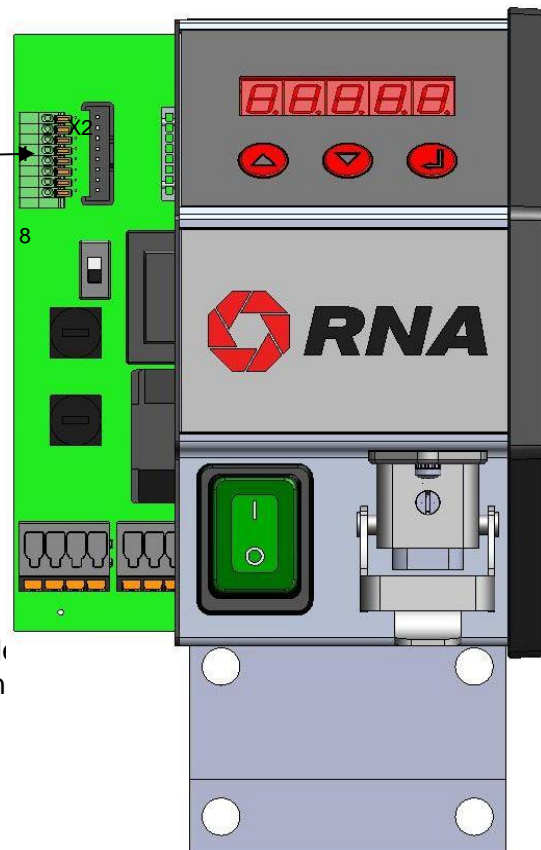

Connection for external enabling signal:

- Disconnect the device from power supply.
- Open left side of the device
- Fit a plastic cable gland (M8x1) in the existing hole
- Feed the signal cable through the gland and connect
- Close left side of the device
- Connect device to power supply
- Make a test run to test the enabling signal

Terminal X2	Nominal cross-section:	0.5 mm ²
	Stripping length:	11 mm
	Conductor cross-section AWG min. / max.	26 / 20

External enabling parameter assignment.

The external enabling functionality must be set by the Hi parameter in the parameters menu. See chapter 7.

4.4. Changing the supply voltage

The controller is designed to operate both on 230V, 50/60Hz and on 115V, 50/60Hz. The given operating voltage must be set on the selector switch in the controller.

As delivered, the devices are set to the supply voltage indicated in the purchase order.

Attention!


Any work on electrical equipment shall be carried out exclusively by a professional electrician, or by instructed persons working under the direction and supervision of a professional electrician, according to electrotechnical rules.



Having changed the supply voltage take utmost care in re-assembling the controller because otherwise the operating permit or manufacturer's warranty will become void!

Setting the wrong supply voltage may result in electrical or mechanical damage to the controller or vibrating motor.

Changed devices should be marked conspicuously to avoid confusion.

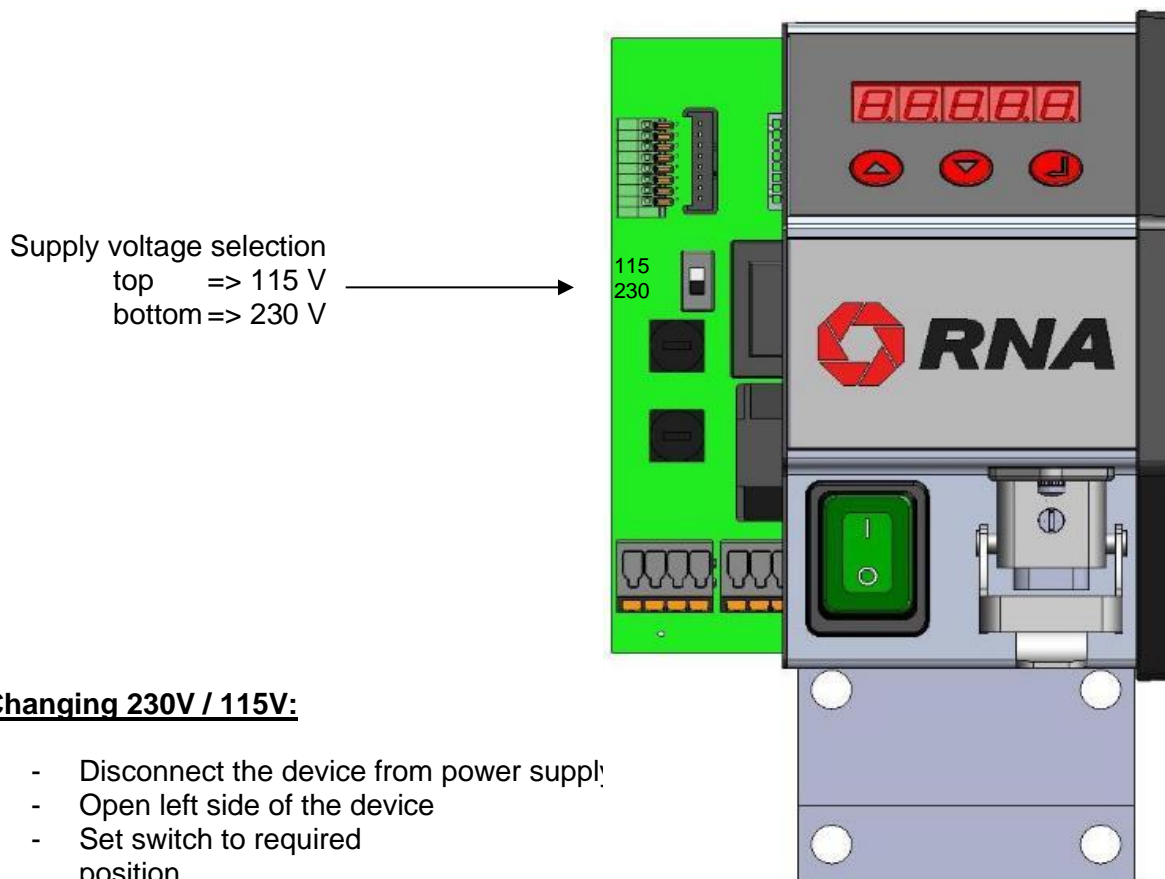

Changing 230V / 115V:

- Disconnect the device from power supply
- Open left side of the device
- Set switch to required position
- Close left side of the device
- Connect device to power supply
- Trial run

4.5. Measuring the output voltage or output current

In some cases it may be necessary to measure the output current or output voltage.



Attention!

This measurement must be made by qualified professionals only. Having completed the measurement take utmost care in re-assembling the controller because otherwise the operating permit will become void!




Notice

The measuring device must be designed for **true root mean square measurement** (true RMS). Other measuring devices would show random values.
The output voltage can only be measured with the vibrating drive connected! The load connector must be plugged in because otherwise the measurement may perhaps be made in the wrong operating mode.

The use of measuring adapter ESZ-02 greatly facilitates measurement of the output voltage and current. The measuring adapter is fitted with appropriate connectors for easy connection between controller and vibrating drive. The use of moving-iron measuring instruments makes sure that the true root mean square value is measured.

5. Connections on the controller


5.1. SCU1000

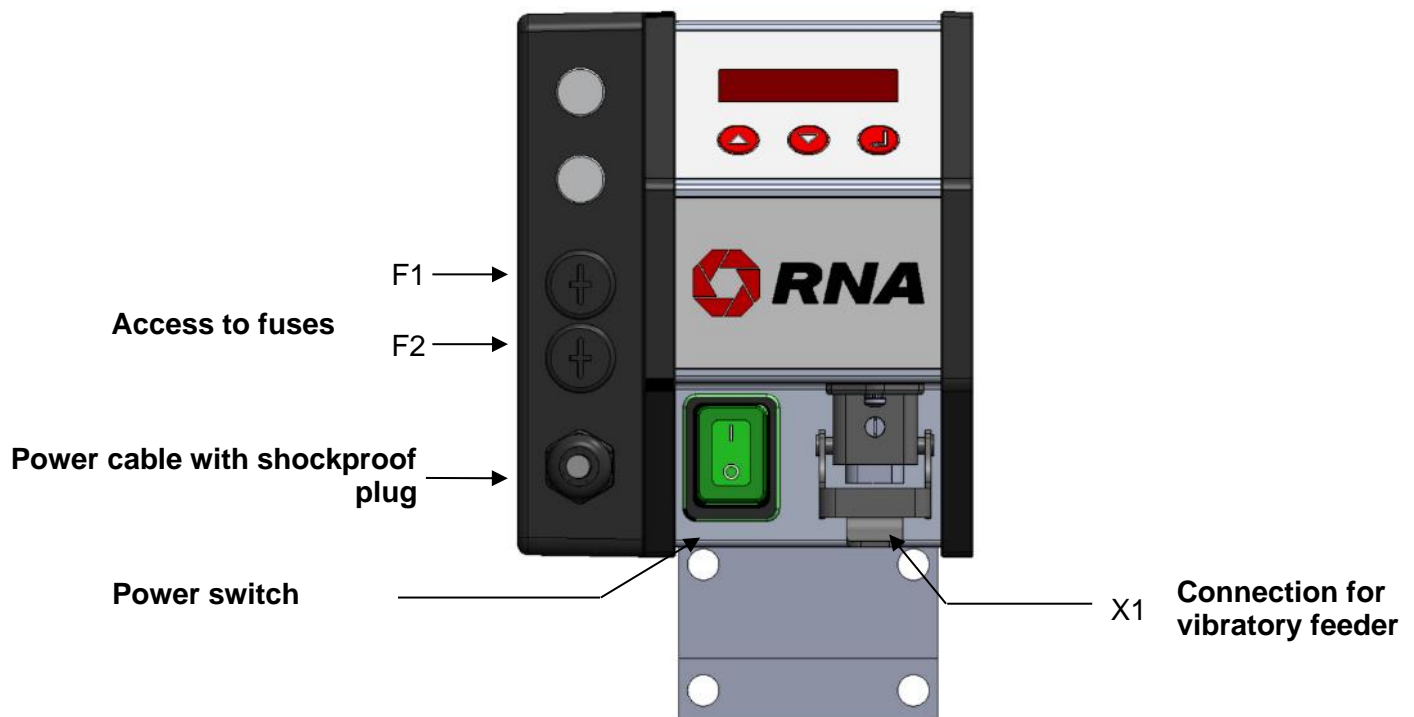

Attention!

When replacing the fuse be sure to use the specified rating of **M6.3A/250V**. Too high a fuse rating may destroy the controller.

6. SCU1000 connection diagram

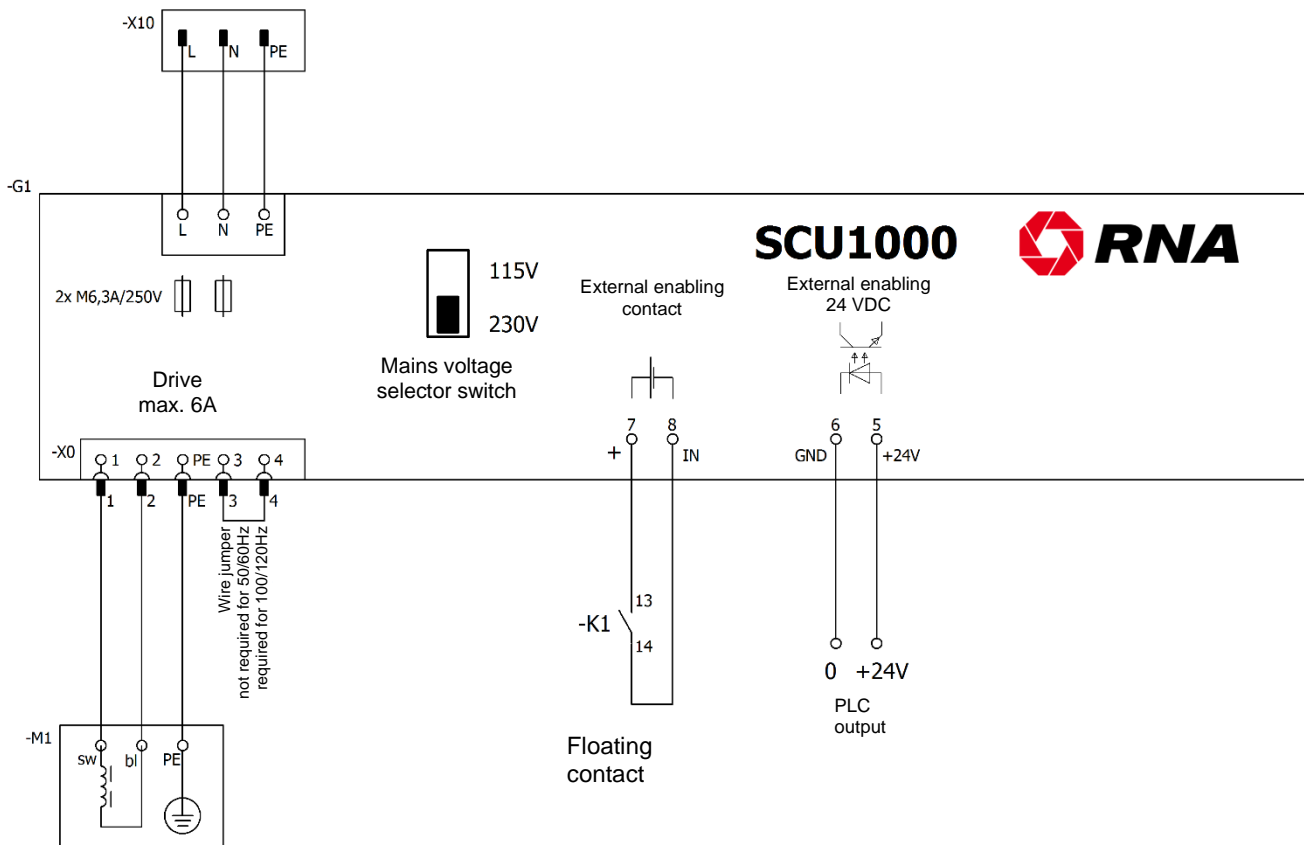

7. Operation of SCU1000

LED display:

A short while after starting of the controller the status display comes up and the set feed rate is shown.

75.0

Other potential display readings:

STOP

External enabling signal missing or wrong parameter assignment.

_75.0

The parameter b (Boost) has been changed from 1.0 to another value.



Attention!

Improper setting of this parameter creates the risk of overheating the magnets.

LoPo

Supply voltage too low.
(This message appears for a few seconds when the device is switched on or off.)

Buttons:

Using the arrow buttons you can change setpoints and scroll through the menu. Press the ENTER button to apply the values changed.

Changing the feed rate:

Upon pressing of the ENTER button the decimal point starts blinking on the status display and you can set the feed rate using the arrow buttons. Press ENTER again to complete the entry. The decimal point stops blinking.

Opening the parameters menu:

Press both arrow buttons at the same time. The parameters menu will come up after one second. The display shows the first parameter with its set value. Using the arrow buttons you can scroll through the list of parameters. For description of parameters see below.


Changing parameters:

Press the ENTER button to change a parameter. While the decimal points are blinking you can change the parameter using the arrow buttons. Press ENTER again to complete the entry. The decimal points stop blinking.


Exiting the parameters menu:

Scroll through the parameters menu until the display shows End. Press ENTER to see the status display. The status display will also appear if you press both arrow buttons at the same time for one second.

7.1. SCU1000 menu structure




Display:
Boost factor ≠ 1.0 (for full-wave only)



Output inhibited by
missing enabling signal

Display

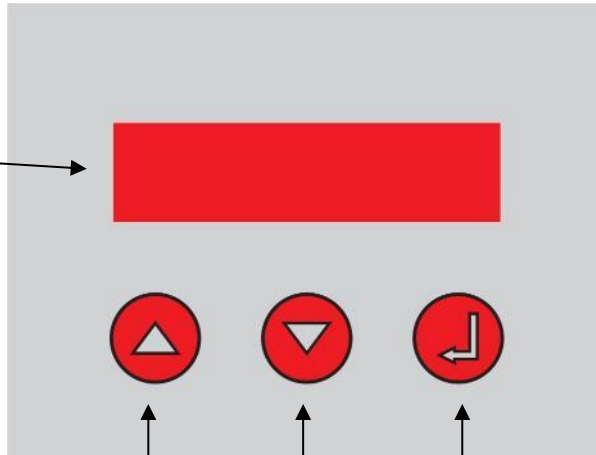


Up

Down

EN-
TER

Status display

Quick access menu

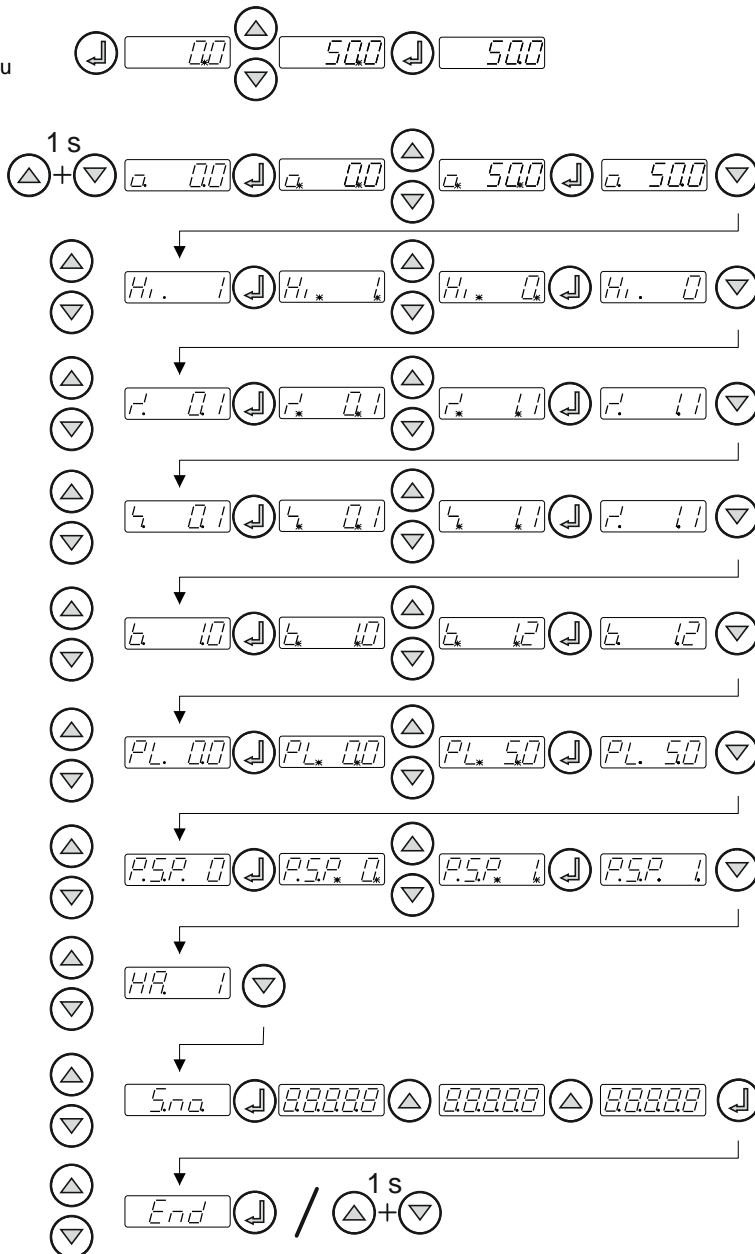

Feed rate 0...100%

Feed rate 0...100%

I = inverted enabling input

Soft start: 0...10 s

Soft stop: 0...10 s

Boost factor: 0.8...1.2
*for adaptation of vibrating drive
(only effective in full-wave mode)*

Minimum feed rate (r.p.m.): 0..35 %

I = quick menu disabled

Vibration frequency indication:
2 = full wave (100 Hz)
1 = half wave (50 Hz)

Software version

Return to status display

7.2. Description of SCU1000 parameters



Attention

Setting of wrong parameters may result in electrical or mechanical damage to the controller or vibrating motor.

Therefore, set a low feed rate on the controller before starting. Then check for proper operation while the output is increased.

Description of parameters in the parameters menu.

o. 75.0	Feed rate setting in %. Can be set from 0 ... 100%. Can also be changed in the status display (if PSP parameter at 0).
Hi. 1	External enabling function. 1= Vibrating drive starts without ext. signal and stops when the external signal is present. 0= Vibrating drive stops without ext. signal and starts when the external signal is present.
∫ 0.2	Soft start time, run-up time from feeder start. Adjustable from 0 ... 10s, default setting is 1s.
∩ . 0.2	Soft stop time, run-down time from feeder stop. Adjustable from 0 ... 10s, default setting is 0.2s.
b. 1.0	Boost factor, can be set from 0.8 to 1.2. Only effective in full-wave mode (100/120Hz). Default setting 1.0 Changing the boost factor is not necessary in normal operation. Such change is only required in case of special vibrating drive systems.







Attention!

Improper setting of the boost factor will overheat the connected magnets.

PL. 35	Lower limit of feed rate. Can be set from 0 to 35%.
P.s.p. 0	Disabling feed rate adjustment in the status display. 0 = enable (default setting) 1 = disable Now you can adjust the feed rate via parameter o only.
HA. 1	Display of operating mode or vibrating frequency (only with vibrating drive connected): 1 = 50/60Hz (half wave) 2 = 100/120Hz (full wave) The change of operating mode or vibrating frequency takes place only via coding in the vibrating motor connector. See chapter 4.2.
5.no.	Indication of the controller software version.
End	Return to status display.

8. Dimensional drawing of SCU1000

All dimensions in mm

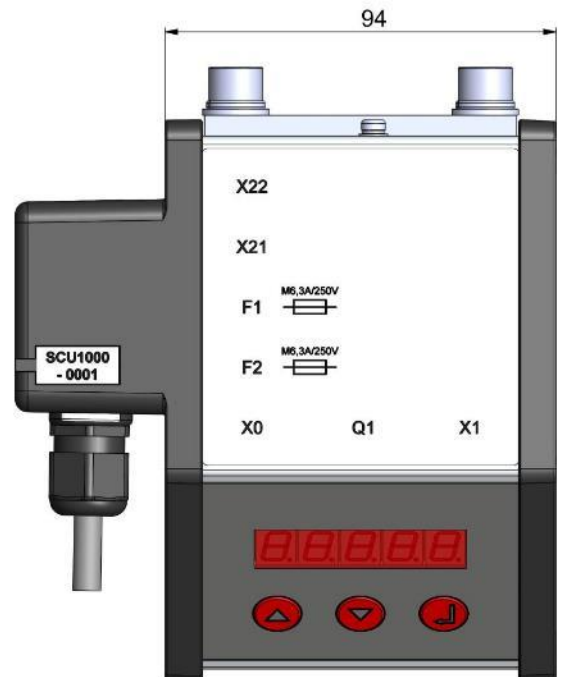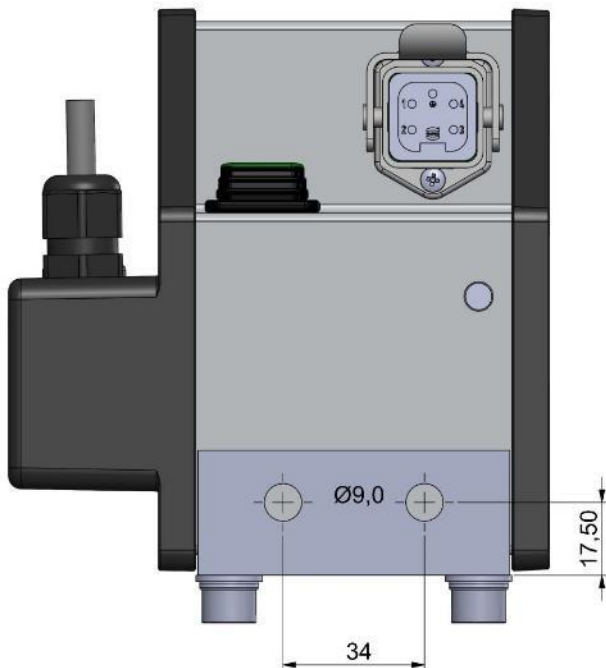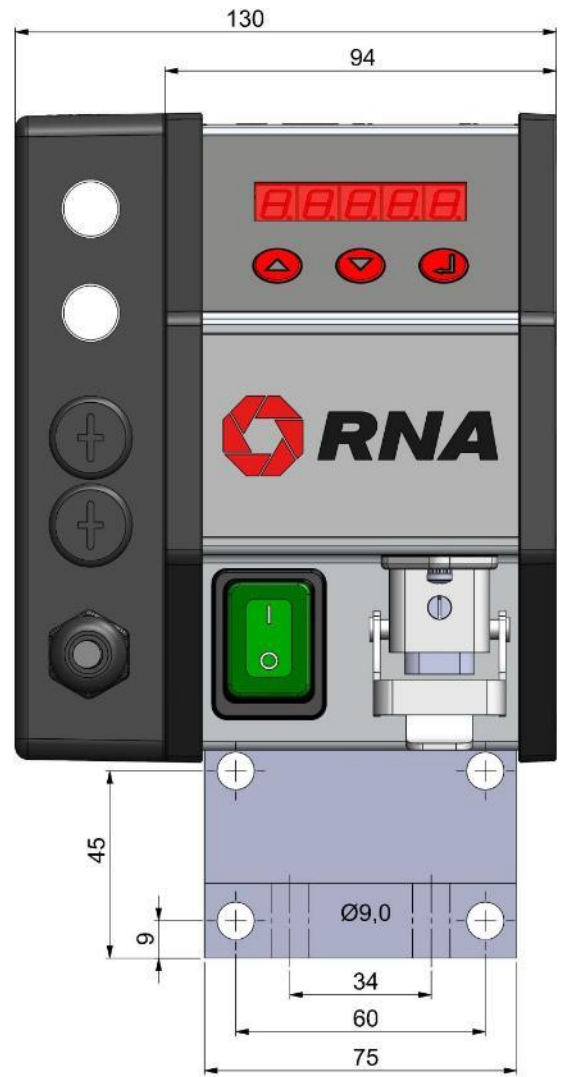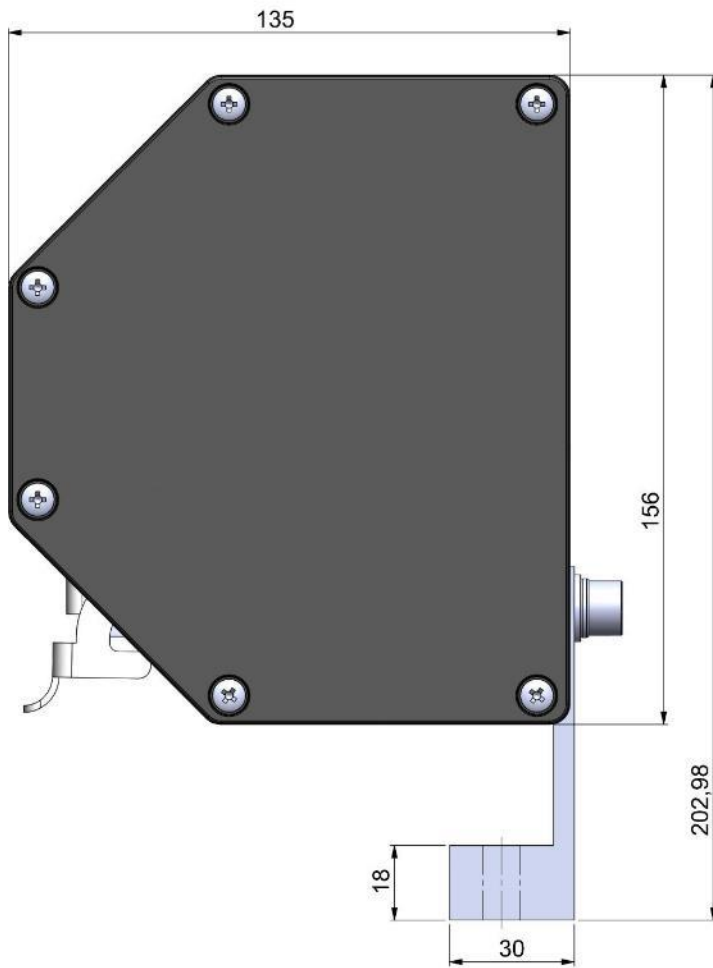



Headquarter

Rhein-Nadel Automation GmbH
Reichsweg 19-23
D-52068 Aachen
Tel.: +49 (0)241-5109-0
E-Mail: vertrieb@RNA.de
www.RNA.de

Further RNA group companies:



PSA Zuführtechnik GmbH
Steinackerstraße 7
D-74549 Wolpertshausen
Tel.: +49 (0)7904-94336-0
E-Mail: info@psa-zt.de
www.psa-zt.de



RNA Automation Ltd.
Unit C Castle Bromwich Business Park
Tameside Drive Birmingham B35 7AG
United Kingdom
Tel.: +44 (0)121-749-2566
E-Mail: sales@rnaautomation.com
www.rnaautomation.com



HSH Handling Systems AG
Wangenstraße 96
3360 Herzogenbuchsee
Switzerland
Tel.: +41 (0)62-956 10-00
E-Mail: info@handling-systems.ch
www.handling-systems.ch



RNA Vibrant S.A.
Carrer de l'Energia
08940 Cornellà de Llobregat (Barcelona)
Spain
Tel: +34 (0)93-377-7300
E-Mail: info@vibrant-RNA.com
www.vibrant-RNA.com



RNA Digital Solutions GmbH
Reichsweg 19-23
D-52068 Aachen
Tel.: +49 (0)1515-99 28 255
E-Mail: kontakt@rnadigital.de
www.designforfeeding.com
www.rnadigital.de

Further manufacturing sites of the RNA Group:

Lüdenscheid branch

Rhein-Nadel Automation GmbH
Nottebohmstraße 57
D-58511 Lüdenscheid
Tel.: +49 (0)2351-41744
E-Mail: werk.luedenscheid@RNA.de

Ergolding branch

Rhein-Nadel Automation GmbH
Ahornstraße 122
D-84030 Ergolding
Tel.: +49 (0)871-72812
E-Mail: werk.ergolding@RNA.de

Remchingen branch

Rhein-Nadel Automation GmbH
Im Hölderle 3
D-75196 Remchingen-Wilferdingen
Tel.: +49 (0)7232-7355-558
E-Mail: werk.remchingen@RNA.de